


Static electricity causes severe problems in many areas of the textile industry. Some of these are shown below. Please contact the factory for solutions to other applications.


Carding

The sliver coming out of the carding process can be highly charged. The long-range lonstorm static eliminator can be positioned about 500mm above the apron so will not interfere with the product.

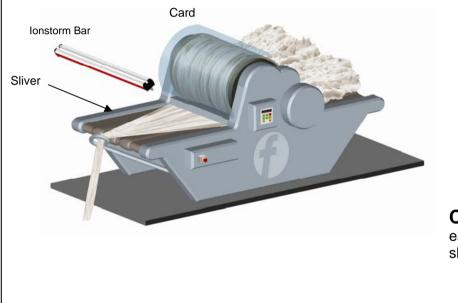

Warping, Beaming, Sizing


The high speed varn can be highly charged, resulting in "ballooning" and varn breaks. The typical solution is to neutralise the varn when it is flat after a comb or evelets.

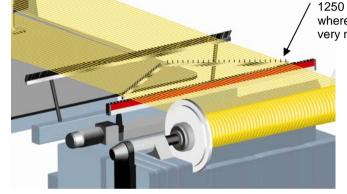

1250 Bar positioned just after a comb, where the yarn does not change its path very much.

Creels It is often necessary to neutralise each layer of varn coming from a creel, as shown.

These 1250 Bars may be joined together in series in a "ladder" so that only one cable goes back to the Power Unit.

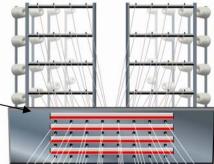

Tel: 44 (0) 1398-331114 Fax: 44 (0) 1398-331411 Issue: 2

Email: sales@fraser-antistatic.co.uk

Website: www.fraser-antistatic.co.uk

File: TEXTILES

© Fraser Anti-Static Techniques Ltd 2009

TEXTILE APPLICATIONS: CARDING, BEAMING, CREELS Page 1 of 2





Ionstorm Bar

SOLUTIONS TO STATIC PROBLEMS


Stenter, "A" frame delivery

The moving delivery arm may make it difficult to neutralise the fabric with conventional short range static eliminators. If this is the case then the best product to use is the lonstorm Bar - positioned about 500mm from the centre position of the fabric it will neutralise the charge.

Inspection Machines

Static charge is generated as the fabric is unwound and passes over the light table.

This can cause adhesion to the table and also give shocks to people handling the inspected fabric. The solution is to position 1250 Bars as shown in the sketch below.

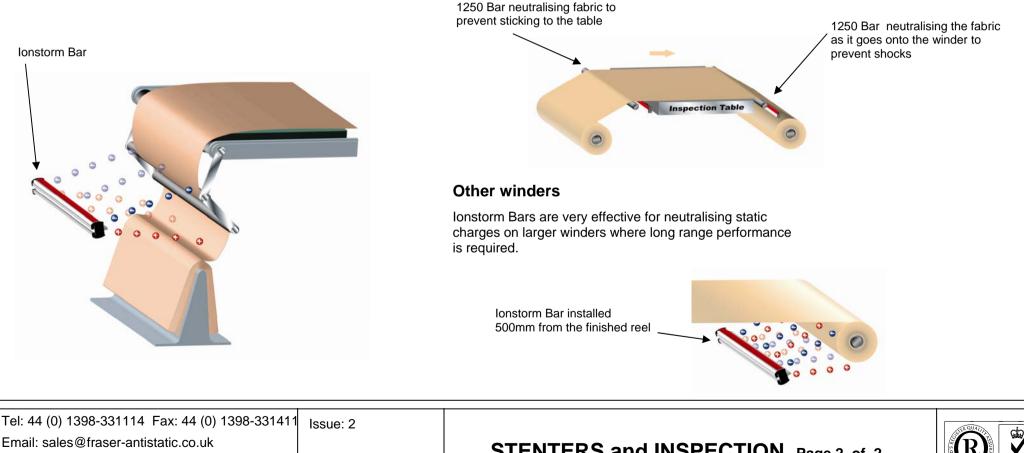

Email: sales@fraser-antistatic.co.uk

Website: www.fraser-antistatic.co.uk © Fraser Anti-Static Techniques Ltd 2009

File: TEXTILES

STENTERS and INSPECTION Page 2 of 2

